

 **This page is not fully translated, yet. Please help completing the translation.**
(remove this paragraph once the translation is finished)

Module "Stiffness matrix"



Input data

Querschnitt

Results and Output

Steifigkeitsmatrix

Berechnung und Beschreibung der einzelnen Komponenten

[clt:design:stiffness:stiffnessmatrix](#)
[brettsperholz](#), [steifigkeiten](#)

Bending and torsion



Shear for CLT-plate loaded out-of-plane



In-plane Stiffness values



Eccentric effects



Exportmöglichkeit

Über den Button  wird eine csv-Datei erstellt, welche die Input-Daten für RFEM 5 beinhaltet.



In RFEM 5 über "Edit Surface" und das Tab "Stiffness Matrix" kann die csv-Datei importiert werden.



From:
<https://www.ihbv.at/wiki/> - IHBV Wiki

Permanent link:
https://www.ihbv.at/wiki/doku.php?id=en:clt:hotspot:software:cltdesigner:manual:modul_stiffness_matrix&rev=1510739845

Last update: **2019/02/21 10:31**
Printed on 2025/09/19 15:45